

**SENCOR®**

SRM 1890SS  
SRM 1891RD



## **EN ■ Fully Automatic Rice Cooker**

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers. Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision. Keep this appliance and the power cord out of reach of children that are younger than 8 years of age.
- Children must not play with the appliance.
- This appliance is designed for cooking rice and for keeping cooked rice warm.
- This appliance is designed for household use only. It is not intended for use in locations such as:
  - staff kitchens in stores, offices and other workplaces;
  - hotel or motel rooms and other living areas;
  - agricultural farms;
  - bed and breakfast establishments.
- Only use the appliance with the original accessories from the manufacturer.
- The appliance must be located on a stable and even surface.
- Do not place the appliance on or near an electric or gas stove or other sources of heat.
- Connect the appliance only to a properly grounded socket.
- Before connecting this appliance to a power socket ensure that:
  - the rated voltage on the rating label is the same as the electrical voltage in the power socket,
  - the removable bowl is filled with an appropriate amount of rice and water and that it is correctly seated inside the outer pot.
- Do not start the appliance without the lid being properly placed on it.
- Take care that water is not poured on the power plug.




#### **Attention:**

Do not pour rice or water into the outer pot. Incorrect use may lead to injuries or damage to the appliance.

- During operation there needs to be sufficient area for air circulation above the appliance and around it.
- Accessible surfaces of the appliance are hot during use and afterwards as a result of residual heat. Do not touch the hot surface. Use the handle and grip when handling the pot or lid.

- Always turn off the appliance and disconnect it from the power socket if you leave it without supervision, if you will not be using it and before cleaning.
- Allow the appliance to fully cool down before moving, cleaning or storing it.
- Regularly clean the appliance after each use according to the instructions in the chapter Cleaning and maintenance.
- To avoid possible injury by electrical shock, do not clean the outer pot or the power cord under running water and do not submerge in water or any other liquid.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the socket. Disconnect the appliance from the power socket by gently pulling the plug of the power cord.
- If the power cord is damaged, it must be replaced by an authorised service centre or by a similarly qualified person, this will prevent the creation of a dangerous situation.
- Do not use the appliance if it does not function properly or is damaged in any way. To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. Tampering with the appliance during the warranty period may void the warranty.

**A**

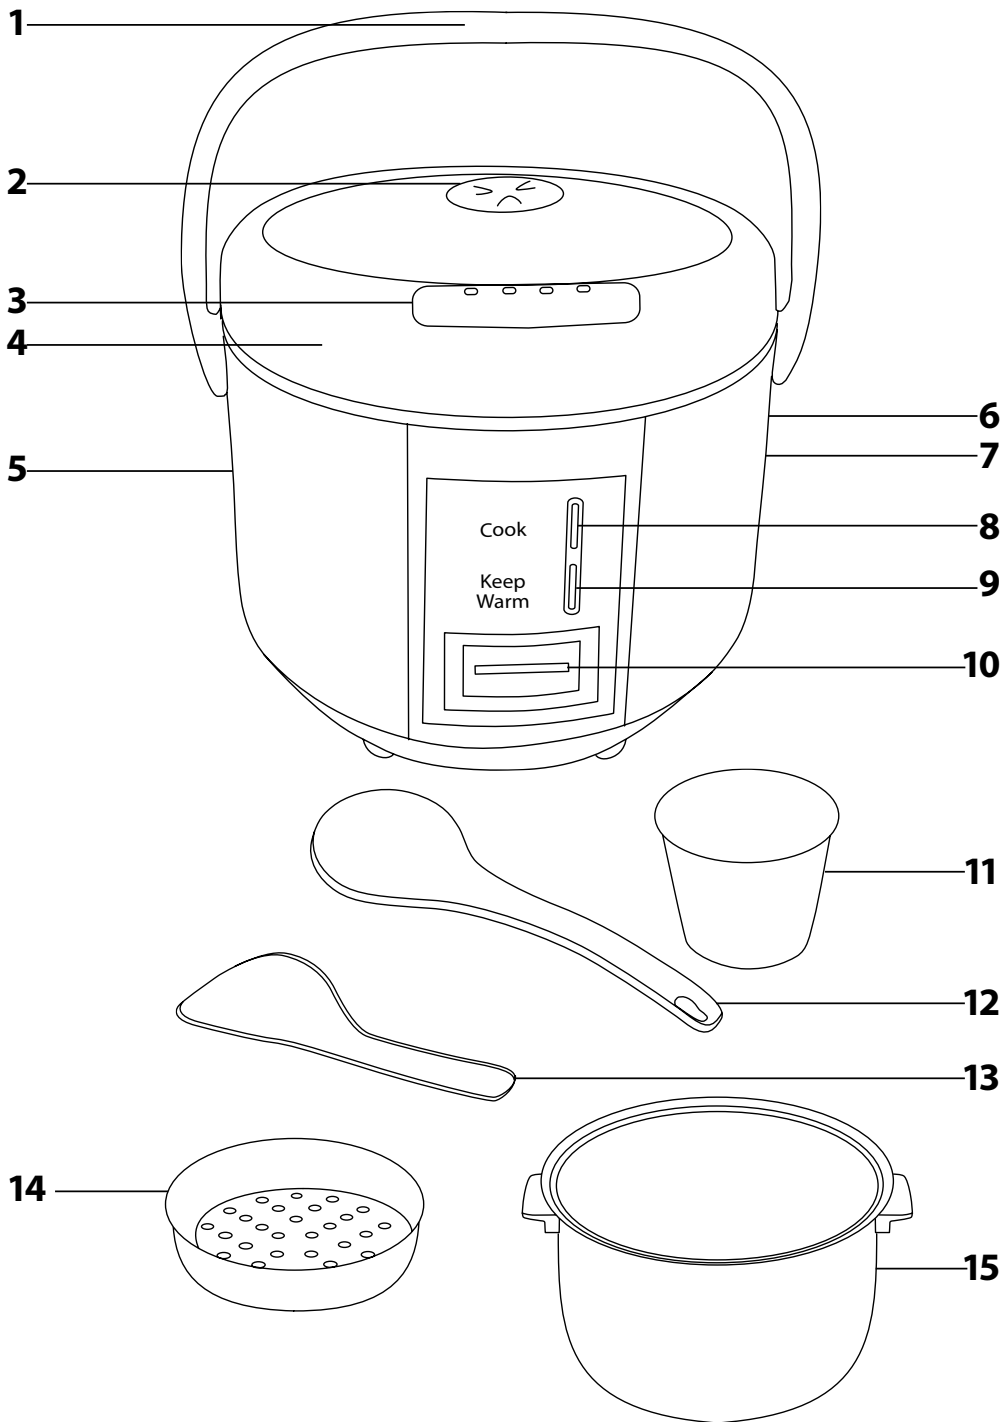

# EN Fully Automatic Rice Cooker

## User's manual

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

### DESCRIPTION OF THE RICE COOKER AND THE SUPPLIED ACCESSORIES

- |                                    |   |
|------------------------------------|---|
| <b>A1</b> Carry handle             | <b>A10</b> Cooking and keep warm mode toggle switch |
| <b>A2</b> Steam outlet             | <b>A11</b> Rice and water measuring cup             |
| <b>A3</b> Open lid button          | <b>A12</b> Ladle                                    |
| <b>A4</b> Lid                      | <b>A13</b> Stirring spoon                           |
| <b>A5</b> Outer pot                | <b>A14</b> Steamer                                  |
| <b>A6</b> Power cord (not shown)   | <b>A15</b> Inner removable non-stick bowl           |
| <b>A7</b> Power switch (not shown) |   |
| <b>A8</b> Cooking indicator        |   |
| <b>A9</b> Keep warm indicator      |   |

### BEFORE FIRST USE

1. Take the rice cooker and its accessories out of the packaging materials.
2. Wash the removable bowl **A15**, measuring cup **A11**, spoon **A13** and ladle **A12** in warm water with kitchen detergent. Then rinse all these parts under clean running water and dry them thoroughly.

### USING THE RICE COOKER

1. Place the removable bowl **A15** on the kitchen countertop or another even, stable surface. Measure the required amount of rice using the supplied measuring cup **A11**.



#### Attention:

In a single batch, it is possible to cook a maximum of 8 level measuring cups of rice.

Transfer the rice to a strainer and rinse through using running water. Transfer the rinsed rice into the removable bowl **A15** and evenly spread it out from the centre towards the sides of the bowl. Add the appropriate amount of cold water. You will find the recommended rice: water dosage ratio in the table below.

Number of level measuring cups of rice	Amount of water
1	0.2l
2	0.4l
3	0.6l
4	0.8l
5	1.0l
6	1.2l
7	1.4l
8	1.6l
9	1.7l
10	1.8l



#### Note:

Two measuring scales are marked on the measuring cup **A11**. One measuring scale is used for measuring rice ( $\frac{1}{4}$ ,  $\frac{1}{2}$ ,  $\frac{3}{4}$  cup or one level measuring cup) and the second scale is used for measuring water (40 to 160 ml). A single level measuring cup is equivalent to 140 g of loose uncooked rice.



#### Attention:

The rice to water ratio can be modified as necessary. However, make sure that the water level does not exceed the 1.8 L water level mark on the inside wall of the removable bowl **A15**. Otherwise boiling water could spray out during the cooking process.

2. Place the bowl **A15** into the outer pot **A5** and close the lid **A4**. Make sure that bowl **A15** is correctly seated in the outer pot **A5**.
3. Insert the power plug into an electrical power socket. Slide the power switch **A7** to position I (turned on).
4. After inserting the power cord into the power socket, the KEEP WARM (maintaining temperature) mode will automatically be activated. This is indicated by the KEEP WARM **A9** indicator being lit. To start the COOK (cook rice) mode, slide the switch **A10** downwards. The COOK indicator **A8** will turn on. Do not slide switch **A10** back to the upper position while the rice is cooking.
5. The rice will be cooked in approximately 30 minutes. Afterwards, the rice cooker will automatically switch to the KEEP WARM (maintaining temperature) mode. The KEEP WARM (maintaining temperature) mode can keep the rice warm for up to 6 hours. After this, the rice cooker will turn off.



#### Tip:

The rice will taste better if you allow it to finish cooking in the KEEP WARM (maintaining temperature) mode for 10 to 20 minutes.



#### Note:

To maintain flavour, we recommend that you do not keep the rice warm for longer than 3 hours. Otherwise it may dry out.

6. If you wish to serve the rice, carefully open the lid by pressing the open lid button **A3**. Gently stir the rice using the spoon **A13** and serve.



#### Attention:

To avoid damaging the non-stick surface of the removable bowl **A15**, do not use metal kitchen utensils to stir the rice.

7. Another batch of rice can be cooked after several minutes as soon as it is possible to start the COOK (cook rice) mode.



#### Note:

Do not attempt to hold down the switch **A10** in the lower position.

8. When you have finished using the appliance, slide the power switch **A7** to position 0 (turned off). If you will not be using the rice cooker, disconnect it from the power socket.

### STEAM COOKING

- The rice cooker also has a steam cooking function. Put a sufficient amount of water (0.5 l or more) into the bowl. Place vegetables or other foods into the steamer. Then proceed in the same way as when cooking rice.
- When all the water has been evaporated, the rice cooker will switch to the Keep Warm mode. Therefore, it is necessary to monitor the status of the food and water.

### CLEANING AND MAINTENANCE

- Check that the power cord is disconnected from the power socket and allow the rice cooker to cool down. Take the removable bowl **A15** out of the outer pot **A5** and remove any remaining rice.

- Wash the bowl **A15**, measuring cup **A11**, spoon **A13** and ladle **A12** in warm water with kitchen detergent. Then rinse these parts under running water and dry them.



**Attention:**

Do not wash the removable bowl **A15** in a dishwasher.

- Clean the outer pot **A5** using a lightly damp cloth and then wipe dry.
- Do not use abrasive cleaning products, steel wool, petrol, solvents, etc. for cleaning.

**STORAGE**

- Store the assembled rice cooker in a dry, clean place that is out of children's reach.

**TECHNICAL SPECIFICATIONS**

Rated voltage range.....	220–240 V
Rated frequency .....	50/60 Hz
Rated power input .....	700–830 W
Capacity .....	1.4 kg of uncooked rice + 1.8l water

We reserve the right to change text and technical specifications.

**INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of used packaging material at a site designated for waste in your municipality.

**DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when

buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

**For business entities in European Union states**

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

**Disposal in other countries outside the European Union.**

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.