

**SENCOR®**

SMS 5011SL / SMS 5012GR

SMS 5013RD / SMS 5014TQ



## **EN ■ Men's Electric Shaver**

### READ CAREFULLY AND STORE FOR FUTURE USE.

- This electric shaver may be operated by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use this appliance in a safe manner and understand the potential dangers. Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children. Keep the electric shaver and its power adapter out of reach of children that are younger than 8 years of age.
- This electric shaver is intended for shaving facial hair. Do not use it for shaving legs, the armpit or groin areas, etc., or for trimming animal hair.
- This electric shaver is intended for domestic use. Do not use it for commercial purposes or outdoors.
- Only use the supplied original power adapter (5 V  $\overline{\text{---}}$ , 1 A) to charge the electric shaver.
- Charge and use the electric shaver at a sufficient distance from the bath, wash basin and other containers filled with water.
- Before connecting the adapter to a power socket, make sure the voltage stated on its rating label corresponds to the voltage in your power socket.
- Operate, charge and store the electric shaver at room temperature. Do not expose it to the effects of the outdoor environment, extreme temperatures, direct sunlight, excessive humidity or excessively dusty environments. Do not place it near heaters, open fires or other appliances or equipment that are sources of heat.
- We do not recommend using the electric shaver on parts of the face where there are open wounds or lacerations, burns, blisters, etc.



This electric shaver can be washed under a water tap.

 
 


### **Warning:**

Before cleaning with water, make sure that the electric shaver is disconnected from the power adapter.

- Perform cleaning and maintenance according to the instructions in chapter Cleaning and maintenance. Do not submerge the electric shaver in water when cleaning it.

- Store the electric shaver with the protective cover placed on the shaving head to prevent its damage.
- Do not use an electric shaver or power adapter that are damaged in any way. A damaged power adapter must be replaced for a new power adapter of the same type. For all repairs of the electric shaver or replacement of a damaged power adapter, please contact an authorised service centre. Do not repair the electric shaver yourself or modify it any way to prevent a dangerous situation from arising. By tampering with the product you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.

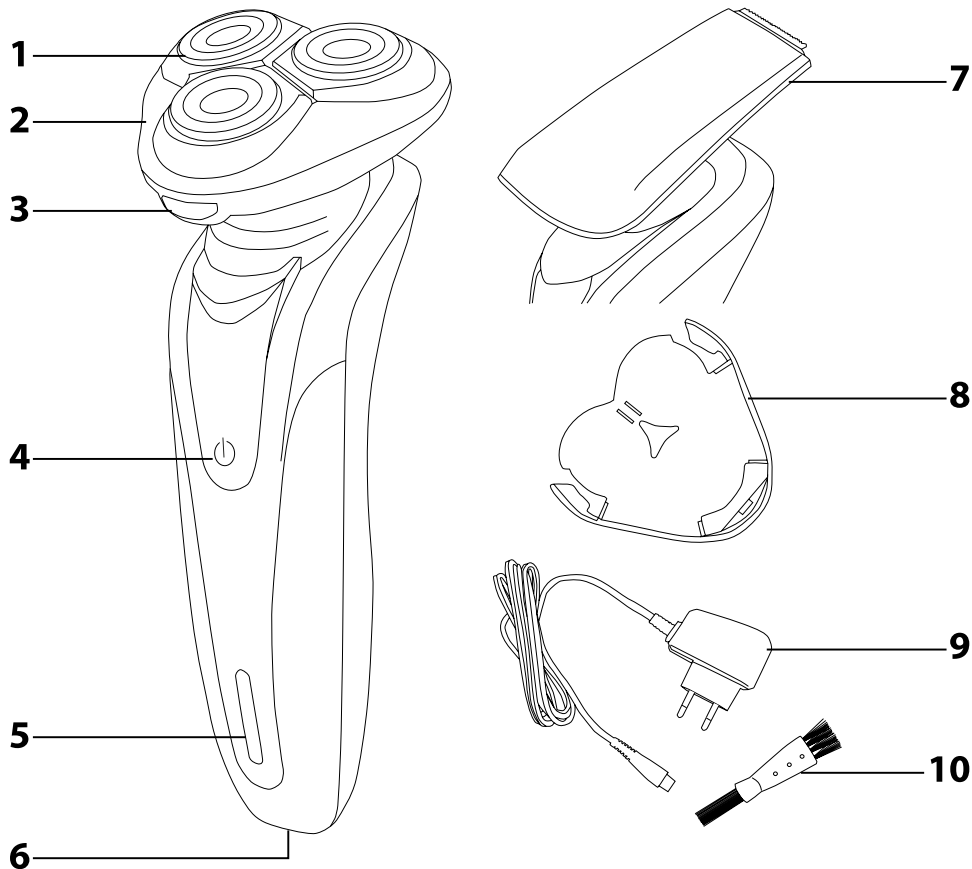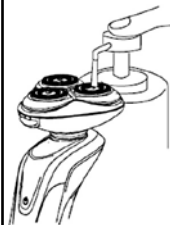**A****B****C****D****E****F****G**

 
H





I



J

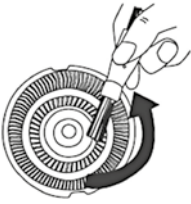

K

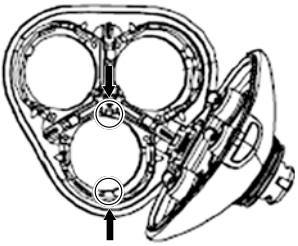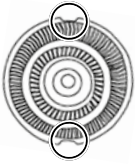  

- Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

## DESCRIPTION OF THE APPLIANCE

<b>A1</b> Cutters	<b>A5</b> LED charging indicator
<b>A2</b> Removable shaving head consists of three independent tilting shaving heads with 4D technology. Thanks to 4D technology, the tilting heads perfectly adapt to facial contours.	<b>A6</b> Power adapter connection socket
<b>A3</b> Shaving head open button	<b>A7</b> Removable hair and beard clipper
<b>A4</b> On/Off button	<b>A8</b> Shaving head protective cover
	<b>A9</b> Power adapter
	<b>A10</b> Cleaning brush
	<b>A11</b> Travel case (not shown)

## ATTACHING AND REMOVING THE SHAVING HEAD AND THE HAIR AND BEARD CLIPPER

- Make sure that the electric shaver is turned off and disconnected from the power adapter **A9**.
- Attach the shaving head **A2** or clipper **A7** from above on to the handle of the electric shaver and check that both parts are firmly joined together.



### Note:

Connection is only possible in one direction.

- Remove the shaving head **A2** or clipper **A7** by pulling away from the electric shaver handle.

## CHARGING THE ELECTRIC SHAVER

- This electric shaver contains an integrated Li-Ion rechargeable battery that enables cordless operation.
- Before charging the electric shaver, turn it off using button **A4**.
- Insert the jack on the power adapter **A9** into socket **A6** located on the underside of the electric shaver handle and the plug of the power adapter **A9** into a power socket (100–240 V).
- After connecting the electric shaver to a power socket, the LED indicator **A5** will be lit red. Once the electric shaver is fully charged, the LED indicator **A5** will be lit green. A full charge requires approximately 2 hours.
- Disconnect a fully charged electric shaver from the power adapter **A9** and disconnect the power adapter **A9** from the power socket.



### Note:

If you are charging the electric shaver for the first time or if you have not used it for a long time then a full charge may require a longer time.

Do not leave the electric shaver connected to a power socket for an unnecessarily long time.

- A fully charged electric shaver will run for approximately 40 minutes.

## HOW TO ACHIEVE THE LONGEST POSSIBLE BATTERY LIFETIME

- To ensure the longest possible lifetime of the battery, we recommend:
  - do not unnecessarily leave the battery fully charged or completely flat for too long.
  - do not keep the battery permanently fully charged. Its lifetime will be extended by keeping it partially charged.
  - do not fully discharge the battery.

## USING THE ELECTRIC SHAVER

- Before using, make sure that the electric shaver is sufficiently charged and that it is disconnected from the power adapter **A9**.

### 1. DRY SHAVING

- Remove the protective cover **A8** from the shaving head.
- Press button **A4** to turn on the electric shaver.
- Hold the electric shaver by the handle and in short circular motions glide the shaving head **A2** over the skin on the face, moving against the growth direction of facial hair. Apply appropriate pressure to the skin. Do not push too hard.



### Note:

It may take your skin and facial hair two to three weeks to become accustomed to the new way of shaving. During this period, we recommend using the electric shaver every day.

### 2. WET SHAVING

- Proceed in the same way as when dry shaving. Prior to shaving, apply shaving gel or foam on to the skin. You may remove excess foam by washing the shaving head **A2** under running water.

### 3. TRIMMING

- To trim moustaches, goatees, sideburns, hairlines around ears and the area of the nape, etc. use the clipper **A7**. Press button **A4** to turn on the electric shaver. Hold the electric shaver by the handle and gently touch the location where you wish to trim the beard or hair with the trimming blade.
- When you have finished using it, turn off the electric shaver by pressing button **A4** and clean it according to the instructions contained in chapter Cleaning and maintenance.
- After cleaning, put the protective cover **A8** on to the shaving head **A2** to protect it from damage.

## CLEANING AND MAINTENANCE

- For hygiene reasons, clean it after every use. Regular cleaning is also important to ensure the correct operation of the electric shaver and extends the lifespan of the cutters **A1**.
- Before cleaning it, disconnect the electric shaver from the power adapter **A9**.
- For quick and simple cleaning, this electric shaver can be washed under a water tap. Press button **A3** to open the shaving head **A2**, see figure B. Use the brush **A10** to remove dirt and facial hair remains from the inner area of the shaving head **A2**, see figure C, and then close it. Apply a few drops of liquid soap on to the shaving head **A2**, see figure D. Wet the shaving head **A2** under lukewarm running water and then turn the electric shaver on for 10 to 20 seconds. This will create a foam on the shaving head **A2**, see figure E. Then thoroughly rinse away the foam under lukewarm running water, see figure F. Open the shaving head **A2** and rinse out its inner area with lukewarm running water to remove all remaining dirt and hair, see figure G. Carefully dry the handle of the shaving head using a soft cloth and allow the shaving head **A2** to dry naturally. Once the shaving head **A2** is dry, put the protective cover **A8** on to it to protect it against damage.

- The shaving head **A2** should be removed and thoroughly cleaned at least once per week according to the following instructions. Take the shaving head **A2** off the electric shaver handle. Press button **A3** to open the shaving head **A2**, see figure H. Turning the central wheel anticlockwise will release the cutter holder, see figure I. Put the holder aside and carefully take the cutters out of the shaving head **A2**. The cutters consists of two parts, i.e. the cover and internal blades. Take the internal blades out of the cover and thoroughly clean all the parts including the inner area of the shaving head **A2** using the included brush **A10**, see figure J. Assemble the cutters **A1** and put them back in their place. Make sure that the tabs along the perimeter of the frame into which the cutters **A1** are placed, fit into the slots along the perimeter of the cutter **A1**, see figure K. On to the cutters **A1** place the holder and secure it in place by turning the central wheel clockwise. Close the shaving head **A2** and reattach it to the electric shaver handle.



**Attention:**

When handling the inner cutters **A1**, be very careful not to injure yourself on their sharp blades.

- To clean the clipper **A7**, use the included brush **A10**. We recommend lubricating the clipper with a cup of sewing machine oil once every three months. Apply a drop and evenly spread it out over the shaving blades. Wipe off excess oil using a clean, dry cloth.
- Do not submerge the electric shaver in water when cleaning it. Keep the power adapter **A9** and its power cord dry.
- Do not use cleaning products with an abrasive effect, solvents etc. to clean the electric shaver. Otherwise, the surface of the out case of the appliance may be damaged.

**REPLACING THE SHAVING HEAD**

- To maintain a clean well-shaven appearance, we recommend replacing the shaving head **A2** based on the degree of wear and tear.
- The shaving head **A2** is available from you vendor both in online and brick&mortar stores as a complete set under model part number Sencor SMX 005.

**TECHNICAL SPECIFICATIONS**

**Electric Shaver**

Battery .....Li-ion / 3.2 V / 500 mAh  
 Time required for charging to full capacity .....approximately 2 h  
 Operating time when fully charged ..... approximately 40 min  
 Noise level ..... 75 dB(A)

**Power adapter**

Input ..... 100–240 V~, 50/60 Hz, 0.2 A  
 Output ..... 5 V  $\overline{\text{---}}$ , 1 A

The declared noise emission level is 75 dB(A), which represents a level A of sound power with respect to a reference sound power of 1 pW.

**INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS**

Dispose of used packaging material at a site designated for waste in your municipality.

**BATTERY DISPOSAL**



Prior to disposing of the product or handing it over at a specialised collection facility, it is necessary to ensure that the built-in battery is removed. Before removing the battery, turn the electric shaver on and wait until the battery is completely flat. Using a small screwdriver, remove the front cover from the electric shaver handle. Cut off the contacts on both sides of the built-in battery and remove it. Battery removal may also be performed at an authorised service centre. In the event that the product has been disassembled for the purpose of ecological disposal then it must not be reassembled.

The battery contains environmentally damaging substances and therefore does not belong in standard household waste. Hand it over for proper disposal at respective collection locations.

**DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT**



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

**For business entities in European Union states**

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

**Disposal in other countries outside the European Union.**

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.